

Short Introduction



Automotive Test System

This document includes a short introduction of the EM TEST automotive test system. For detailed operating information, consult the device and software user's manuals.

- ISO 7637
- SAE J1113
- Manufacturer spec as
GM, Ford, Chrysler,
Mercedes, BMW, VW,
PSA, Renault, Fiat
.....



Test Systems

Complete test systems can be configured as follows:

- ⇒ 60V / 100A with power mains of 3x400Vac / 32A
- ⇒ 60V / 150A with power mains of 3x400Vac / 32A
- ⇒ 60V / 50A with power mains of 3x400Vac / 16A
- ⇒ 60V / 30A with power mains of 230Vac / 16A
- ⇒ 60V / 15A with power mains of 230Vac / 16A



Before putting the system into operation, please ensure that the correct power mains supply is available in the test lab

Switch On

- ⇒ All instruments mounted into the rack system must be switched on. Please check this before switching on the complete system. Open the rack door at the rear and check the power mains switch of the individual instruments. If necessary please switch on the power mains switch and close the door again.
- ⇒ Switch on the system by using the central power mains switch at the front of the rack. All instruments are now switched on simultaneously and an internal check-up routine is started to find out which instruments are installed.
- ⇒ For the next step please push the Test On button at the front of each instrument. This enables the generator to be ready for testing. The status is shown by the lighted red LED on the front panel. As well as the power mains supply the Test On button must be on for all instruments mounted in the rack.

⇒ **Warning:**

In case that an instrument is not switched on within the system it will not be realized to be available. Therefore during following test failure messages or fail operations may result. Therefore it necessary to switch on all instruments simultaneously with the central power mains switch. Instruments which will be switched on later are not available for the system because they missed the check-up procedure. Than the complete system must be restarted. Even if the operator does not need all units for a current test it is a better decision to have them all switched on.

⇒ **Failure messages:**

Depending on the local power mains supply the VDS 200 may show a failure message during the start procedure, **Over temperature** or **Over voltage**. The VDS 200 needs a certain inrush current to charge up the internal power capacitors to its specified voltage level. In case that this was not possible and the voltage was too low the switching on procedure must be repeated. For the second time the message should no more appear.

Switch Off

⇒ **Warning:**

Do not switch off the system during a running test procedure. The instruments may work under maximum load conditions and can not be shut down in a controlled matter. During a running test the **Security Switch** shall only be used in case of damages at the DUT or in case of personal danger for the operator. For this case please use the Security Switch which is part of delivery. The switch shall be connected to the rear of the rack.

⇒ Normally the system is switched off after all tests are finished. For switching off please use the central power mains switch at the front of the rack.

 
CD start

For more information about the Automotive Test System please insert the enclosed CD in your CD-drive of your PC. If the CD doesn't start automatically please start the file "iso_d_cd.exe".



Documentation

In the menu <documentation> you will find more information about your Test System. The information available depends on the acquired system and is structured as shown in the following picture.

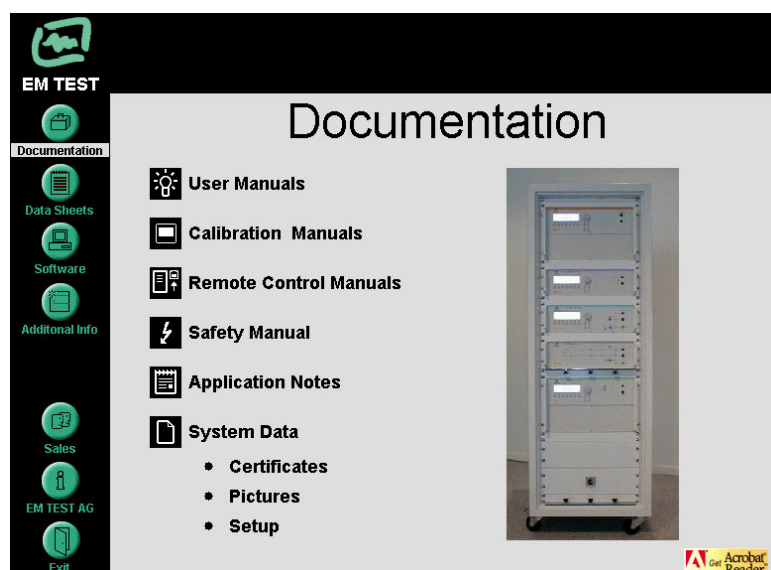

- *User Manuals*
The user manuals contain the detailed information about the equipment and the way to use it.
- *Calibration Manuals*
If available this section includes the guidelines how to calibrate the equipment according to the standards.
- *Remote Control Manuals*
In the case you want to control EM Test equipment with your own software you will find the detailed information and the remote command list in this section.
- *Safety Manual*
The safety manual contains the safety requirements for all EM TEST generators.
- *Application Notes*
For some equipment, you will find available application notes for your Test System in this section.
- *System Data*

Certificates

This section contains the certificates of calibration of the acquired equipment.

Pictures

 
If you have acquired a racked test system, you will find some pictures of your system in this section.

Setup

For complex racked test system a detailed description of the interfaces is given in this section.

Install Software ISMISO

To install the software ISMISO please use the enclosed CD. Select the menu <Software> and the following window will appear.

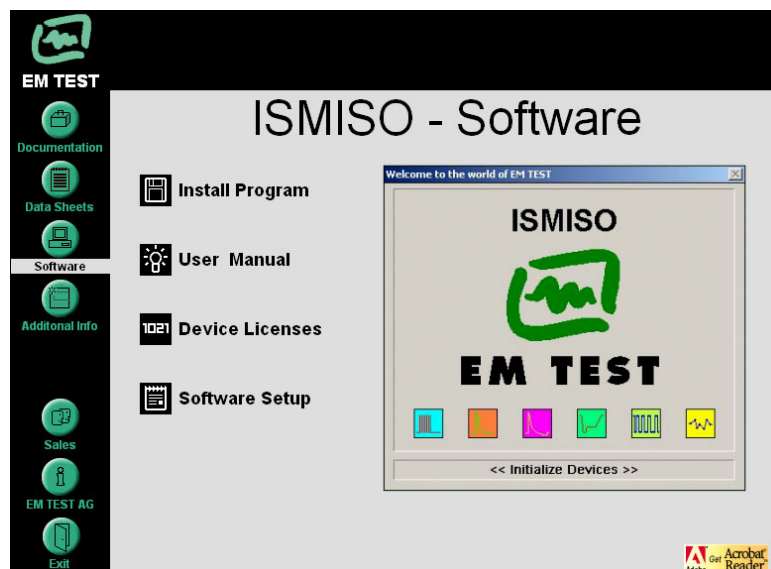

- *Install Program*
With this menu the installation of ISMISO is started. The installation routine guides you with an easy dialogue through the installation procedure. During the installation the relevant data will be expanded, copied and the user program will be installed either in a new or in an existing program group.

- *User Manual*

The user manual is opened with this menu. It contains all the information necessary for a successful configuration and application of the software ISMISO.

- *Device Licenses*

 
This menu contains the license codes for your equipment. To control the equipment with the software you need to enter these license codes in the menu "Device" of your software.

- *Software Setup*

This menu contains the most important dialogues for the configuration of the software related to your equipment.

Start ISMISO Software

- ⇒ Before booting the software on your computer, the test system must be switched on and must be connected via the GPIB (IEEE 488) bus. During the booting procedure the software checks the licenses and after that enables the operator to use the software.
- ⇒ Please take notice that the software do not support all GPIB boards which are available on the market. In case of communication problems please contact your responsible service and support center for advice. Please also read the manual of ISM ISO software in which you can find a list of boards being supported by the software. Further information is given in this manual.
- ⇒ In case that the operator is starting the software without a test system connected, the operator can use only the demo mode. For complete operation of the software the test system has to be connected and the software has to be restarted.

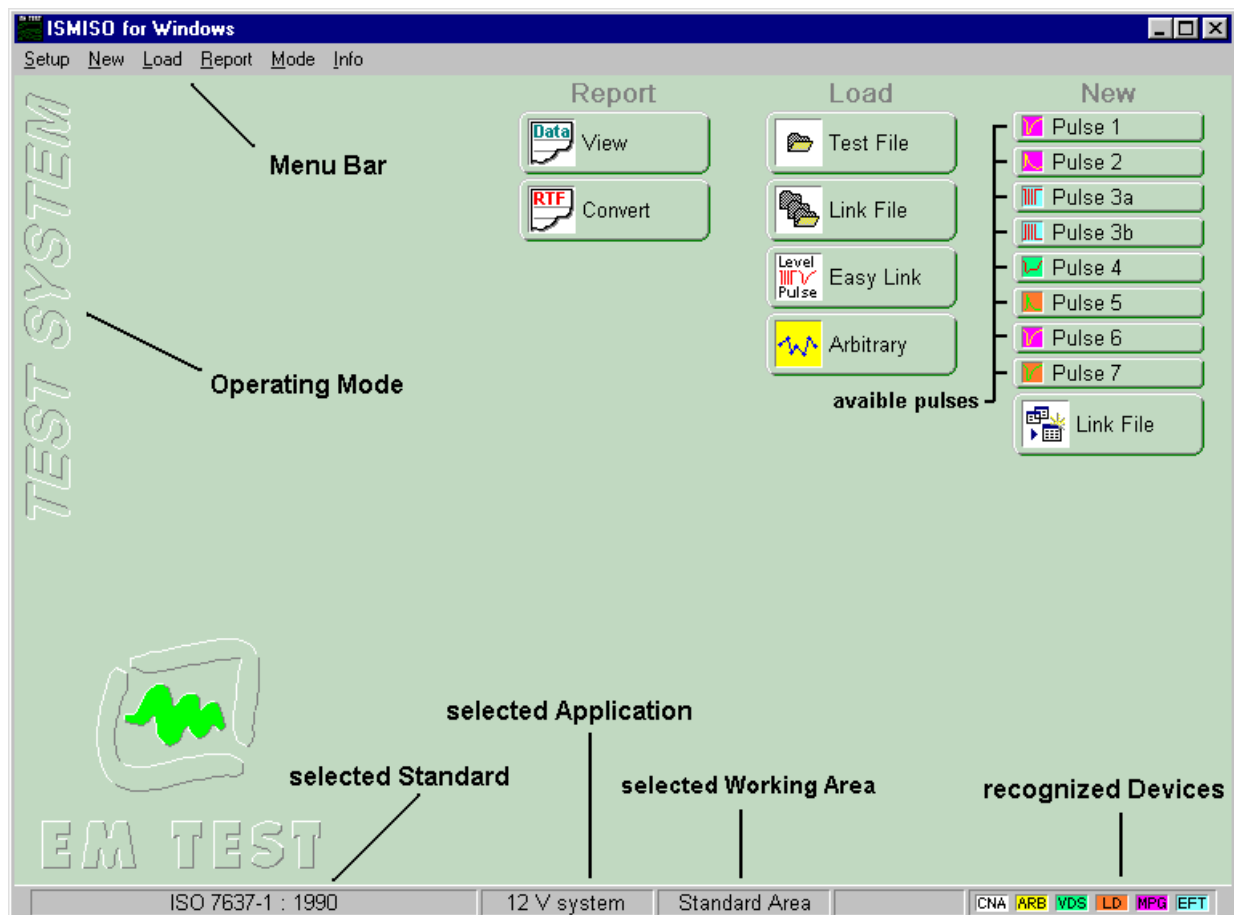

Configure ISMISO Software

- ⇒ For starting the software the first time, it is necessary to enter the necessary licenses for the instruments used. Only instruments, which have a license number can be operated later on. The related license numbers are attached to the ISMISO software package and as a file on the CD.
- ⇒ First you have to configure your test system. Open the menu <SETUP><Device> and enter the parameters that are shown in the menu <Software Setup>. Devices which are not in the list, are available via the selection "Search XXX" (for ex. Search EFT).
- ⇒ In most cases only one VDS is part of the system and therefore has to be configured as "Battery supply from VDS". In case that there is a second VDS available this instrument might be configured as an "External dc supply".
Also in most cases there is only one CNA 200 available, which must be enabled.

No.	En able	Device	License	Serial No.	IEEE Add.	Coupling Network	DC Source	External Source	VDS No.	Software Number	State / Version
1	<input checked="" type="checkbox"/>	EFT200A	DW0Z1D9Z1C		10	1					Simul.
2	<input checked="" type="checkbox"/>	MPG200B	VC4L9M0N7S		11	1					Simul.
3	<input checked="" type="checkbox"/>	MPG200 S13	VC5L9G0N5S		20	1					Simul.
4	<input checked="" type="checkbox"/>	LD200B1	XS1R5A0Q9Q		13	1					Simul.
5	<input checked="" type="checkbox"/>	LD200 S16	XS2R3X0Q9Q		21	1					Simul.
6	<input checked="" type="checkbox"/>	VDS200B S4	SL9R9X7L0U		12	1	1				Simul.
7	<input checked="" type="checkbox"/>	VDS200B S3	SL9R3S2X0U		16	Nc.	2				Simul.
8	<input checked="" type="checkbox"/>	PFS200B S4	XG1G9Z9X1K		14	1		2			Simul.
9	<input checked="" type="checkbox"/>	ARB2714	TB0M0R5Y5X		18				6		Simul.

Coupling Network Setup DC Source Setup OK Cancel Page 1

Example Device Setup

No.	Enable	Type	Serial-No.	Drop 1 [V]	Drop 2 [V]
1	<input checked="" type="checkbox"/>	CNA200		0.7	1.2
2	<input type="checkbox"/>	CNA200			
3	<input type="checkbox"/>	CNA200			
4	<input type="checkbox"/>	CNA200			
5	<input type="checkbox"/>	CNA200			
6	<input type="checkbox"/>	CNA200			

Drop 1: VDS, EFT, MPG + LD negative Pulse
Drop 2: MPG + LD positive Pulse

OK Cancel

Example Coupling Network Setup

No.	Enable	Type	Max. Voltage [V]
1	<input checked="" type="checkbox"/>	Battery source from VDS	
2	<input checked="" type="checkbox"/>	External controlled DC Source (by PFS)	60.0
3	<input type="checkbox"/>	Battery source from VDS	
4	<input type="checkbox"/>	Battery source from VDS	
5	<input type="checkbox"/>	Battery source from VDS	
6	<input type="checkbox"/>	Battery source from VDS	
7	<input type="checkbox"/>	Battery source from VDS	
8	<input type="checkbox"/>	Battery source from VDS	
9	<input type="checkbox"/>	Battery source from VDS	
10	<input type="checkbox"/>	Battery source from VDS	

 
OK Cancel

Example DC Source Setup


System Setup

The test system is built up in a modular way by using individual instruments which are connected to each other via the GPIB (IEEE 488) bus. The test rack includes the following parts:

- Central power mains supply for all instruments mounted.
- Central GPIB (IEEE 488) interface and internal distribution.
- Complete wiring of the internal control busses.
- Complete wiring of the rack internal battery supply. (60V/15A // 30A // 50A // 100A)
- Wiring of the test output of the individual instruments to the central coupling matrix.
- Single port DUT output, except for Voltage Dip
- HF-reference ground system. To this reference ground external ground plane for table top testing or floor standing devices can be connected.
- External dc sources can be connected at the rear part of the rack. The sources can be remote controlled via a 0-10V analog signal for automatic voltage setting.

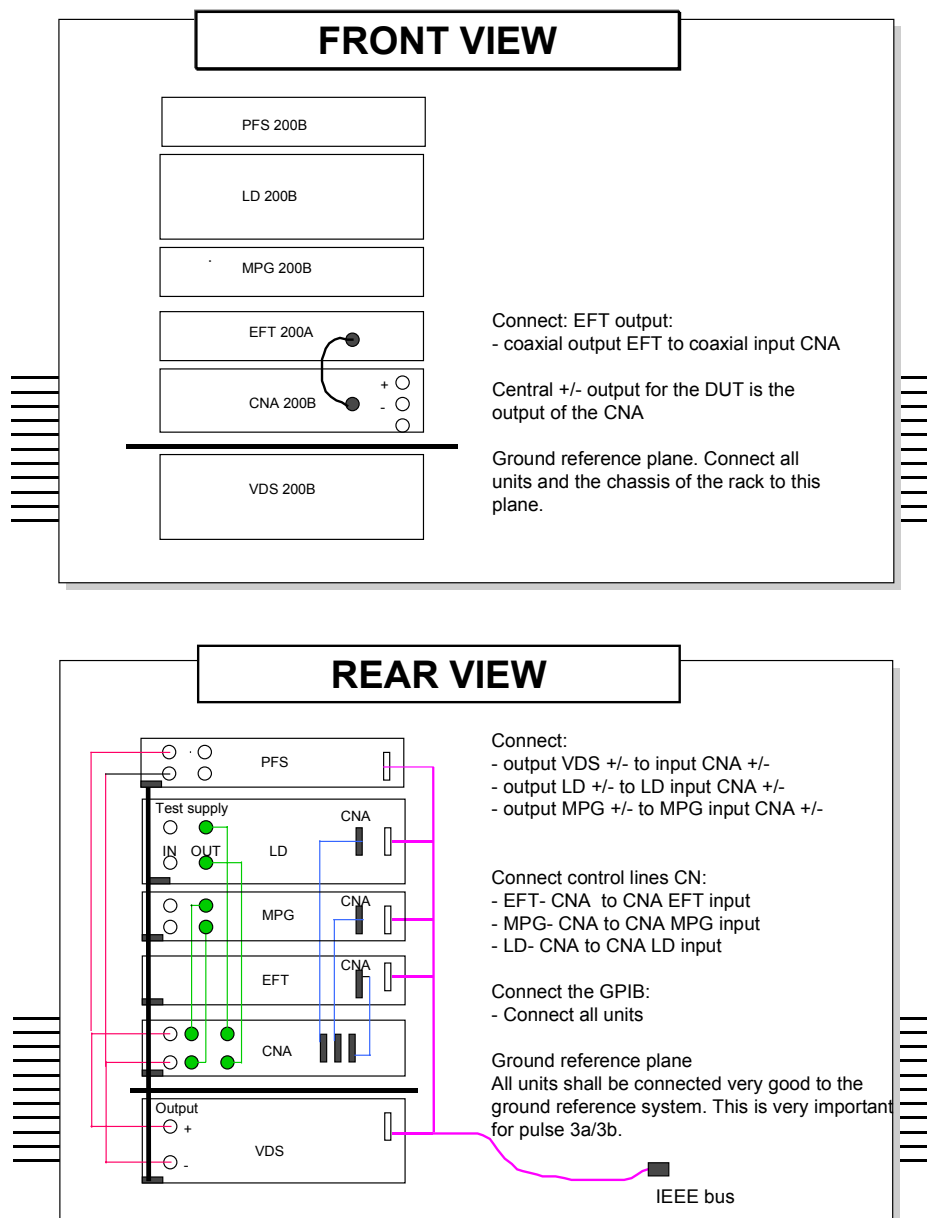


Central DUT connection port

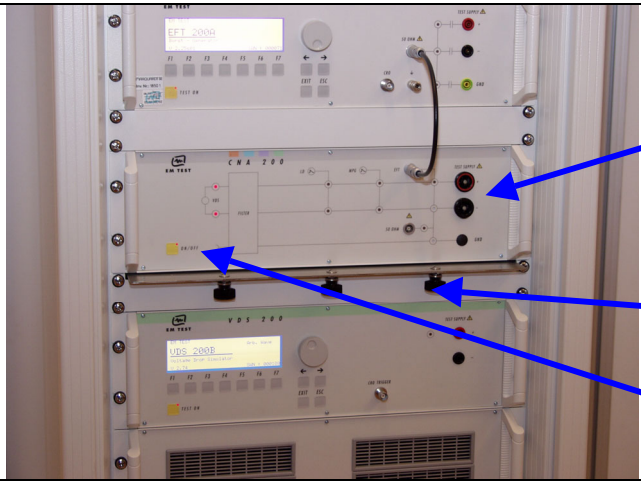 

CNA 200B



- All pulses and other events are switched together at this central coupling matrix. There is a single port available to connect the DUT. The only exception is for Voltage Dip testing, this is available only at the direct output of the PFS 200
- Automatic test sequences controlled by ISMISO software are easy to realize.
- Ground reference connection
- The **Test On** button can be used to switch the DUT supply on and off.

 Attention:
All Test On buttons must be switched.

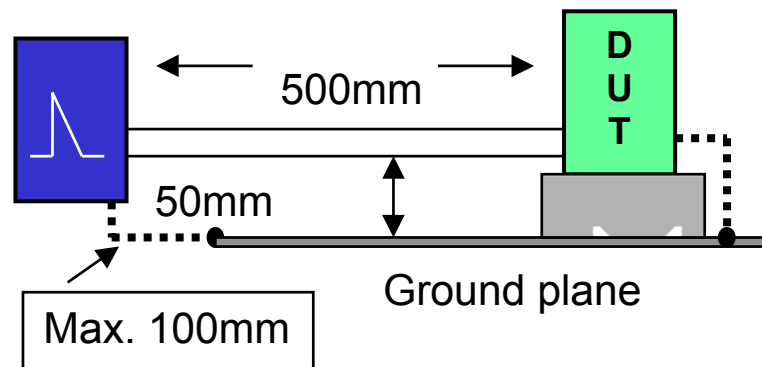

External DC Source

  To simulate the so-called **Voltage Dips** the use of an external dc source is required. This source is controlled by the PFS 200 via an analog signal of 0 – 10V.

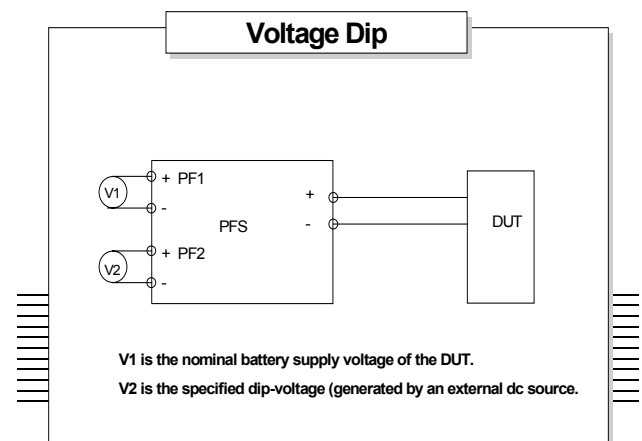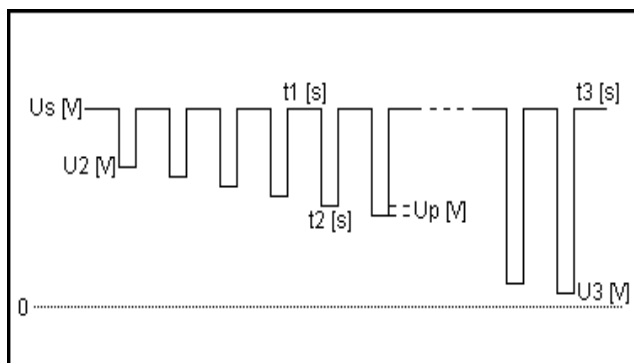

The voltage V_s is generated by the built-in VDS 200. This is the specified battery supply (e.g. 13.5V). The voltage V_2 is generated by the external dc source. This is the voltage to which the battery supply voltage is dipped down. The control of this voltage setting is realized within the EM TEST system. The voltage V_2 is preferably supplied from a VDS 200 or a RDS 200.